



Rotating Plate in a Unidirectional Molecular Flow

Introduction

Historically it was not feasible to compute molecular flows directly in complex geometries, so a number of approximate techniques for estimating molecular fluxes and pump down times have been developed. Because these techniques are so extensively used, vacuum practitioners are often unaware of the underlying assumptions, and many of these relations have gained the status of physical laws. Additionally physical laws, such as the ideal gas law, which apply generally within a bulk gas, are often misapplied in the molecular flow regime.

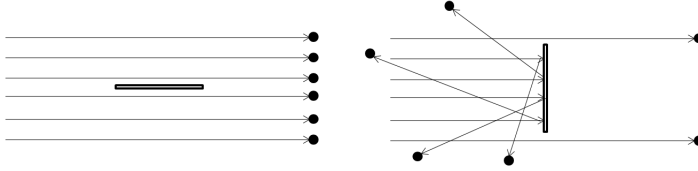


Figure 1: Gas molecules in a collimated molecular flow interacting with a surface in two orientations with respect to the flow. Left: Orientation of the surface in which the pressure and incident flux are both zero. Right: Orientation of the surface in which the pressure and incident flux are maximal. Note that the number density of molecules in the vicinity of the surface is never nonzero.

A simple thought experiment is helpful to highlight some of the assumptions that are frequently made. Figure 1 shows a flat surface (perhaps a thin sheet of metal) interacting with a completely collimated flow of gas molecules. For a surface with characteristic dimension, a , such a flow is created when a diffuse source of gas, with a similar dimension, is placed a distance $l \gg a$ from the surface in a well pumped vacuum system with dimension $l_v \gg l$. The molecules have a range of velocities in this flow, but their direction of travel (indicated by the arrows in the figure) is uniform. If the surface's normal is perpendicular to the direction of travel of the molecules, none of the molecules collide with the top surface, so the pressure and molecular flux on the surface are zero. However, the number density of the gas molecules in the vicinity of the surface is nonzero. Next, rotate the surface such that its normal is parallel to the direction of travel and both the pressure and flux on the surface become finite. The number density also increases.

This simple example illustrates the dangers in employing many of the equations that are frequently used in modeling molecular flows without a detailed understanding of the underlying assumptions. For example, the ideal gas law in the form:

$$p = nk_B T \quad (1)$$

where p is the pressure, n is the number density, k_B is the Boltzmann constant, and T is the absolute temperature, clearly cannot hold in this case, as the pressure acting on the surface is zero in the first configuration while the number density is not. In general the pressure at a point in a molecular flow is *orientation dependent* (pressure is therefore a tensor quantity). Note that the ideal gas law applies for continuum flows to a very good approximation — it breaks down in this case because in deriving it the assumption is made that the molecules are traveling in all directions with equal probability, which is clearly not the case here (note also that the velocity distribution of diffusely reflected or effusing molecules is non-Maxwellian and the ideal gas law assumes a Maxwellian velocity distribution). The same considerations apply to the kinetic theory equation for the molecular flux (G) striking a surface:

$$G = \frac{n\langle c \rangle}{4} \quad (2)$$

where $\langle c \rangle$ is the mean velocity of the molecules. Again it is clear that the equation cannot apply generally from considering [Figure 1](#). The derivation of [Equation 1](#) and [Equation 2](#) is discussed in more detail in the *Molecular Flow Module User's Guide*.

Finally consider the equation relating throughput to pressure differences:

$$Q = C\delta p \quad (3)$$

where Q is the throughput (units of $\text{Pa}\cdot\text{m}^3/\text{s}$), C is the conductance (units of m^3/s) and δp is the pressure difference (units of Pa). This equation predicts the correct throughput for two volumes in which the gas behaves according to the ideal gas law, provided the correct conductance is used (this usually computed analytically or numerically by the method that COMSOL uses to solve molecular flows). Adding conductances using the usual reciprocal laws is also valid, provided there are intermediate regions where the gas behaves ideally. However, conductances cannot be added in this manner when two lengths of tube are connected directly to one another — for example, at a right-angled bend. Considering the equation at a more fundamental level, the SI base units of the throughput (which is usually considered to be conserved through a system) are $\text{kg}\cdot\text{m}^2/\text{s}^3$ (the same base units as watts). Physically, mass flow should be conserved in a steady molecular flow, with units of kg/s . Throughput can be conserved (for an isothermal flow) between regions where the ideal gas law applies, because the volumetric flow rate, S , out of a region in which the ideal gas law applies can be related to the number of molecules that flow out of the region in unit time, \dot{N} , by a modified form of the ideal gas equation:

$$pS = \dot{N}k_B T$$

Clearly, because of the limitations of the ideal gas law, Equation 3 is not a fundamental conservation law that can be applied across any surface in a molecular flow, but rather a useful approximation that applies for connections between large regions in vacuum chambers.

Using COMSOL's Free Molecular Flow interface avoids the assumptions implicit in these techniques. Furthermore COMSOL computes both the number density and pressure in the vicinity of a surface by using kinetic theory to predict the flux between surfaces. For complex geometries it was previously possible to compute molecular fluxes using the "radiation analogy." Because an exact physical analogy exists between molecular flow and heat transfer by radiation, many vacuum practitioners adapted existing radiation codes for computing molecular fluxes. Although these codes compute fluxes accurately, the pressure and number density were usually obtained by means of the ideal gas law. COMSOL computes these quantities correctly and the corresponding radiation results can be significantly different.

This model constructs a flow similar to that shown in Figure 1 and compares the free molecular flow results with those computed using the radiation analogy.

Model Definition

The model consists of a 5 cm slot in the wall of a large, well-pumped vacuum system that is open to a second chamber with a fixed pressure of 10^{-5} mBar. The gas flux from the slot is much larger than the fluxes from any of the other walls in the system. 1 m away from the slot is a 5 cm plate that is rotated with respect to the incoming flux. At this large distance the flux arriving from the slot when the plate is perpendicular to the flow is reasonably constant across the surface of the plate. The pressure, number density, and flux on the plate as a function of the angle to the direction of flow are computed using the Free Molecular Flow interface and compared with predictions based on the radiation analogy.

Results and Discussion

Figure 2 shows the molecular flux on the surface of the plate at each angle of rotation. It is clear that the flux at the surface is reasonably uniform across the plate — so it is reasonable to consider average quantities on the plate as a function of angle.

Figure 3 shows the average flux on the top surface of the plate as a function of the rotation angle. As expected the flux is greatest when the plate faces directly the incoming molecules. The radiation analogy predicts the molecular flux to a very high degree of accuracy (the slight difference between the two results is due to slight differences in mesh).

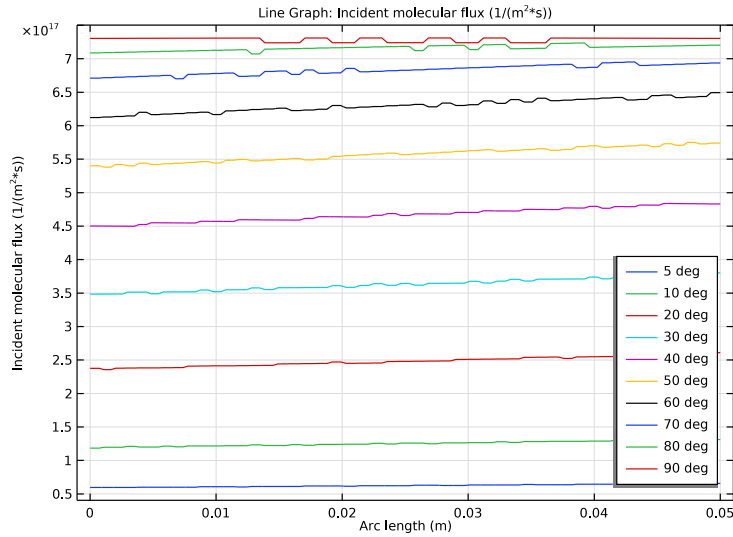


Figure 2: Molecular flux across the surface of the plate at for each orientation of the plate computed. The key gives the angle in degrees of the plate to the horizontal.

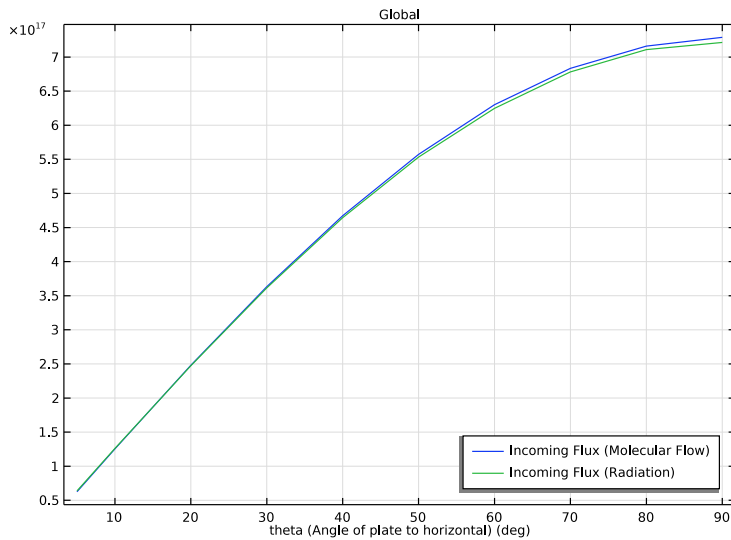


Figure 3: Average molecular flux at the plate computed as a function of the angle of the plate to the horizontal (in degrees) by the radiation method and using the molecular flow interface.

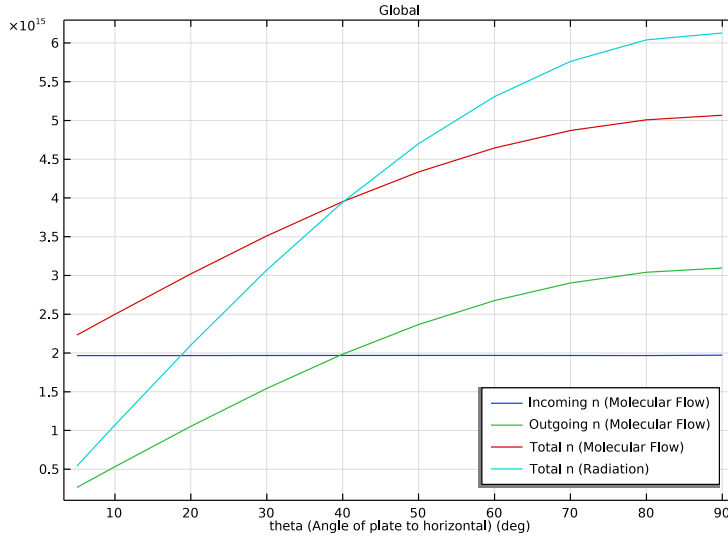


Figure 4: Number density ($1/m^3$) at the plate computed as a function of the angle of the plate to the horizontal (in degrees) by the radiation method and using the molecular flow interface.

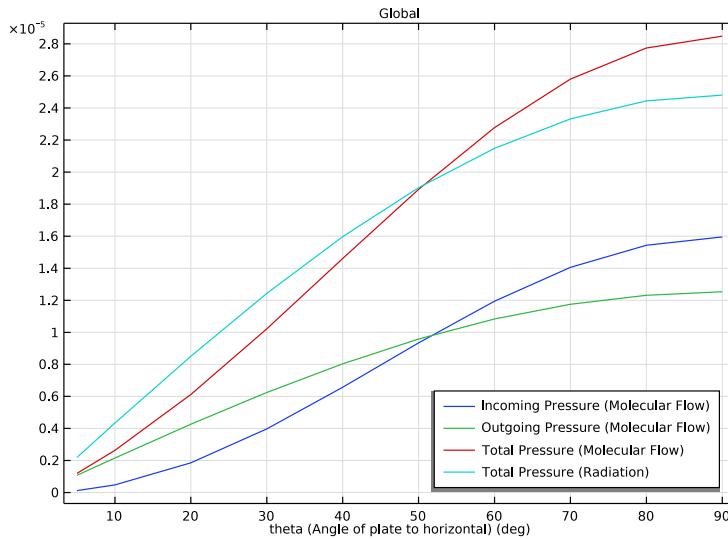


Figure 5: Pressure (Pa) at the plate computed as a function of the angle of the plate to the horizontal (in degrees) by the radiation method and using the molecular flow interface.


Differences between the radiation analogy and the Free Molecular Flow interface become apparent when the results for the pressure or number density are computed using the two methods. Figure 4 shows the number density — note the serious discrepancy predicted by the radiation analogy because at glancing angles (close to 0°) the radiation analogy predicts a vanishing number density, which is clearly incorrect. The molecular flow interface allows the number density to be separated into contributions from incoming and outgoing molecules. Note that COMSOL predicts a constant contribution from incoming molecules, which is clearly physically correct in this case. The outgoing number density contribution vanishes at glancing angles — again as expected physically. Figure 5 shows the pressure distribution at the surface. Again there are serious differences between the form and the magnitude of the pressure predicted by the two methods.

Application Library path: Molecular_Flow_Module/Benchmarks/rotating_plate




Modeling Instructions

From the **File** menu, choose **New**.

NEW

In the **New** window, click  **Model Wizard**.

MODEL WIZARD

- 1 In the **Model Wizard** window, click  **2D**.
- 2 In the **Select Physics** tree, select **Fluid Flow>Rarefied Flow>Free Molecular Flow (fmf)**.
- 3 Click **Add**.
- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **General Studies>Stationary**.
- 6 Click  **Done**.

GLOBAL DEFINITIONS

Set up a parameter for the angle of the plate.

Parameters 1

- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters 1**.
- 2 In the **Settings** window for **Parameters**, locate the **Parameters** section.


3 In the table, enter the following settings:

Name	Expression	Value	Description
theta	90[deg]	1.5708 rad	Angle of plate to horizontal


Build the geometry. Because the effects of the walls of the chamber are neglected, the geometry of the chamber itself is unimportant, provided the inlet location is sufficiently far from the plate.

GEOMETRY I


Rectangle 1 (r1)

- 1 In the **Geometry** toolbar, click  **Rectangle**.
- 2 In the **Settings** window for **Rectangle**, locate the **Size and Shape** section.
- 3 In the **Width** text field, type 1.1.
- 4 In the **Height** text field, type 0.1.
- 5 Locate the **Position** section. In the **y** text field, type -0.05.

Point 1 (pt1)


- 1 In the **Geometry** toolbar, click  **Point**.
- 2 In the **Settings** window for **Point**, locate the **Point** section.
- 3 In the **y** text field, type -0.025.

Point 2 (pt2)

- 1 In the **Geometry** toolbar, click  **Point**.
- 2 In the **Settings** window for **Point**, locate the **Point** section.
- 3 In the **y** text field, type 0.025.




Add the geometry for the plate itself.

Rectangle 2 (r2)

- 1 In the **Geometry** toolbar, click  **Rectangle**.
- 2 In the **Settings** window for **Rectangle**, locate the **Size and Shape** section.
- 3 In the **Width** text field, type 0.05.
- 4 In the **Height** text field, type 0.0025.
- 5 Locate the **Position** section. In the **x** text field, type 1.
- 6 From the **Base** list, choose **Center**.
- 7 Locate the **Rotation Angle** section. In the **Rotation** text field, type theta.

Subtract the plate geometry from the chamber so the geometry reflects the region of molecular flow.




Difference 1 (dif1)

- 1 In the **Geometry** toolbar, click  **Booleans and Partitions** and choose **Difference**.
- 2 Select the object **r1** only.
- 3 In the **Settings** window for **Difference**, locate the **Difference** section.
- 4 Click to select the  **Activate Selection** toggle button for **Objects to subtract**.
- 5 Select the object **r2** only.
- 6 Click  **Build All Objects**.




Import radiation analogy results for comparisons in results processing.

GLOBAL DEFINITIONS

Rad_G



- 1 In the **Home** toolbar, click  **Functions** and choose **Global>Interpolation**.
- 2 In the **Settings** window for **Interpolation**, type **Rad_G** in the **Label** text field.
- 3 Locate the **Definition** section. From the **Data source** list, choose **File**.
- 4 Click  **Browse**.
- 5 Browse to the model's Application Libraries folder and double-click the file **RadiationAnalogyG.txt**.
- 6 Click  **Import**.
- 7 In the **Function name** text field, type **Rad_G**.

Rad_p

- 1 In the **Home** toolbar, click  **Functions** and choose **Global>Interpolation**.
- 2 In the **Settings** window for **Interpolation**, type **Rad_p** in the **Label** text field.
- 3 Locate the **Definition** section. From the **Data source** list, choose **File**.
- 4 Click  **Browse**.
- 5 Browse to the model's Application Libraries folder and double-click the file **RadiationAnalogyP.txt**.
- 6 Click  **Import**.
- 7 In the **Function name** text field, type **Rad_p**.

Rad_n

- 1 In the **Home** toolbar, click  **Functions** and choose **Global>Interpolation**.

- 2 In the **Settings** window for **Interpolation**, type Rad_n in the **Label** text field.
- 3 Locate the **Definition** section. From the **Data source** list, choose **File**.
- 4 Click  **Browse**.
- 5 Browse to the model's Application Libraries folder and double-click the file RadiationAnalogyN.txt.
- 6 Click  **Import**.
- 7 In the **Function name** text field, type Rad_n.

Set up a nonlocal average coupling to compute averages over the top surface of the plate.

DEFINITIONS

Average 1 (aveopl)

- 1 In the **Model Builder** window, expand the **Component 1 (comp1)>Definitions** node.
- 2 Right-click **Definitions** and choose **Nonlocal Couplings>Average**.
- 3 In the **Settings** window for **Average**, locate the **Source Selection** section.
- 4 From the **Geometric entity level** list, choose **Boundary**.
- 5 Select Boundary 6 only.

Next, enter the physics settings. First set the integration resolution to a higher value.

FREE MOLECULAR FLOW (FMF)

- 1 In the **Model Builder** window, under **Component 1 (comp1)** click **Free Molecular Flow (fmf)**.
- 2 In the **Settings** window for **Free Molecular Flow**, locate the **Integration Settings** section.
- 3 From the **Integration resolution** list, choose **4096**.


Use the **Total Vacuum** boundary condition to neglect the effect of the walls of the vacuum system.

Total Vacuum 1

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Total Vacuum**.
- 2 Select Boundaries 1, 2, 4, 5, and 10 only.

Use a **Reservoir** condition for the source of the molecules.


Reservoir 1

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Reservoir**.
- 2 Select Boundary 3 only.
- 3 In the **Settings** window for **Reservoir**, locate the **Reservoir** section.

- 4 In the $p_{0,G}$ text field, type 1e-5[mbar].
- Set up the mesh. A fine mesh is needed only at the reservoir and the plate.

MESH I

Scale I

- 1 In the **Mesh** toolbar, click  **More Attributes** and choose **Scale**.
- 2 In the **Settings** window for **Scale**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Boundary**.
- 4 Locate the **Scale** section. In the **Element size scale** text field, type 0.1.
- 5 Select Boundaries 3, 6, and 9 only.

Size

- 1 In the **Model Builder** window, click **Size**.
- 2 In the **Settings** window for **Size**, locate the **Element Size** section.
- 3 From the **Predefined** list, choose **Extremely fine**.



Free Triangular I

- 1 In the **Mesh** toolbar, click  **Free Triangular**.
- 2 In the **Settings** window for **Free Triangular**, click  **Build All**.


Set the solver to perform a parametric sweep of the rotation angle.

STUDY I

Parametric Sweep

- 1 In the **Study** toolbar, click  **Parametric Sweep**.
- 2 In the **Settings** window for **Parametric Sweep**, locate the **Study Settings** section.
- 3 Click  **Add**.
- 4 In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
theta (Angle of plate to horizontal)	5 range (10, 10, 90)	deg

- 5 In the **Study** toolbar, click  **Compute**.

RESULTS

Incident Molecular Flux (fmf)

Check the uniformity of the flux across the plate surface at each angle.


ID Plot Group 4

In the **Home** toolbar, click  **Add Plot Group** and choose **ID Plot Group**.

Line Graph 1

- 1 Right-click **ID Plot Group 4** and choose **Line Graph**.
- 2 Select Boundary 6 only.
- 3 In the **Settings** window for **Line Graph**, click to expand the **Legends** section.
- 4 Select the **Show legends** check box.


G Uniformity

- 1 In the **Model Builder** window, under **Results** click **ID Plot Group 4**.
- 2 In the **Settings** window for **ID Plot Group**, type G Uniformity in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Study 1/Parametric Solutions 1 (sol2)**.
- 4 Locate the **Legend** section. From the **Position** list, choose **Lower right**.
- 5 In the **G Uniformity** toolbar, click  **Plot**.

Compare the resulting plot with that in [Figure 2](#).

Create plots of the average flux, number density and pressure at the plate as a function of angle.

ID Plot Group 5


- 1 In the **Home** toolbar, click  **Add Plot Group** and choose **ID Plot Group**.
- 2 In the **Settings** window for **ID Plot Group**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Study 1/Parametric Solutions 1 (sol2)**.
- 4 Locate the **Legend** section. From the **Position** list, choose **Lower right**.

Global 1

- 1 Right-click **ID Plot Group 5** and choose **Global**.
- 2 In the **Settings** window for **Global**, locate the **y-Axis Data** section.

3 In the table, enter the following settings:

Expression	Unit	Description
aveop1(G)	1/(m ² *s)	Incoming Flux (Molecular Flow)
Rad_G(theta*180/pi)		Incoming Flux (Radiation)

4 In the **ID Plot Group 5** toolbar, click  **Plot**.

G

1 In the **Model Builder** window, under **Results** click **ID Plot Group 5**.

2 In the **Settings** window for **ID Plot Group**, type G in the **Label** text field.

3 In the **G** toolbar, click  **Plot**.

Compare the resulting plot with that in [Figure 3](#).

Number Density Plate

1 Right-click **G** and choose **Duplicate**.

2 In the **Settings** window for **ID Plot Group**, type Number Density Plate in the **Label** text field.

Global I

1 In the **Model Builder** window, expand the **Number Density Plate** node, then click **Global I**.

2 In the **Settings** window for **Global**, locate the **y-Axis Data** section.


3 In the table, enter the following settings:

Expression	Unit	Description
aveop1(fmf.nin_G)	1/m ³	Incoming n (Molecular Flow)
aveop1(fmf.nout_G)	1/m ³	Outgoing n (Molecular Flow)
aveop1(fmf.n_G)	1/m ³	Total n (Molecular Flow)
Rad_n(theta*180/pi)		Total n (Radiation)

Number Density Plate

1 In the **Model Builder** window, click **Number Density Plate**.

2 In the **Number Density Plate** toolbar, click  **Plot**.

3 Click the  **Zoom Extents** button in the **Graphics** toolbar.

Compare the resulting plot with that in [Figure 4](#).

Pressure Plate

1 Right-click **Number Density Plate** and choose **Duplicate**.



2 In the **Settings** window for **ID Plot Group**, type Pressure Plate in the **Label** text field.

Global I

- 1 In the **Model Builder** window, expand the **Pressure Plate** node, then click **Global I**.
- 2 In the **Settings** window for **Global**, locate the **y-Axis Data** section.
- 3 In the table, enter the following settings:

Expression	Unit	Description
aveop1(fmf.pin_G)	Pa	Incoming Pressure (Molecular Flow)
aveop1(fmf.pout_G)	Pa	Outgoing Pressure (Molecular Flow)
aveop1(fmf.p_G)	Pa	Total Pressure (Molecular Flow)
Rad_p(theta*180/pi)		Total Pressure (Radiation)

Pressure Plate

- 1 In the **Model Builder** window, click **Pressure Plate**.
- 2 In the **Pressure Plate** toolbar, click  **Plot**.
- 3 Click the  **Zoom Extents** button in the **Graphics** toolbar.
Compare the resulting plot with that in [Figure 5](#).