



# Electrode Growth Next to an Insulator

## Introduction

---

This example models electrodeposition of copper with a deforming geometry where an electrode surface is placed next to an insulator, initially at an 180-degree angle. This situation is of interest from a benchmark perspective since nonright angles between insulators and growing electrodes may introduce singularities when modeling deforming geometries ([Ref. 1](#)).

No concentration gradients in the electrolytes are assumed, and a secondary current distribution is modeled.


The model qualitatively reproduces the results of J. Deconinck ([Ref. 1](#)).

## Model Definition

---

### GEOMETRY

The model is made in 2D and consists of a dissolving and a depositing electrode. Only the electrolyte domain is modeled in the geometry. See [Figure 1](#).

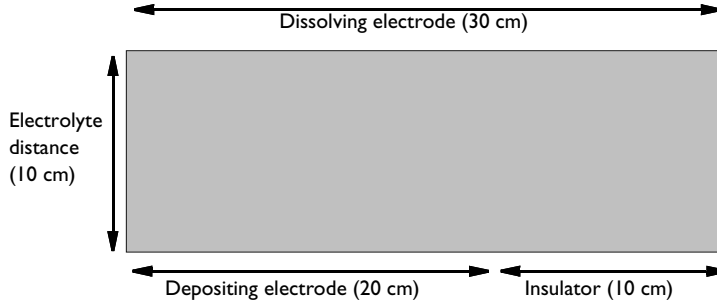


*Figure 1: Initial modeled geometry.*

### ELECTROLYTE


The electrolyte is assumed to be a 0.8 M  $\text{CuSO}_4$ -0.8 M  $\text{H}_2\text{SO}_4$  solution with a conductivity of  $\sigma = 0.23 \Omega^{-1} \text{cm}^{-1}$ , where the  $\text{H}_2\text{SO}_4$  is assumed to act as a supporting electrolyte (due to the high conductivity of the protons). Concentration gradients of  $\text{Cu}^{2+}$  are neglected in the model and thus a secondary current distribution is assumed.

## ELECTRODES

The electrodes both consist of copper. On the dissolving electrode, copper dissolution occurs



whereas copper is deposited on the depositing electrode



A simplified electrode kinetic model is assumed for both electrodes, with a linear relation between the overpotential,  $\eta$ , and electrode reaction current density,  $i_{\text{loc}}$ , according to:

$$i_{\text{loc}} = \eta \cdot 300 \text{ mA}/(\text{cm}^2 \cdot \text{V})$$

By using the copper deposition red-ox reaction as reference potential, the equilibrium potential is set to zero for both electrodes.

The depositing electrode is grounded and an electric potential of 0.778 V is set to the dissolving electrode. All other boundaries are isolated.

## DEFORMING GEOMETRY

Due to the dissolution and deposition of copper, the electrode boundaries move during the simulation. The molar flux of copper,  $N_{\text{Cu}}$  ( $\text{mol}/(\text{m}^2 \cdot \text{s})$ ), over the electrodes is described by Faraday's law according to

$$N_{\text{Cu}} = -\frac{v_{\text{Cu}} i_{\text{loc}}}{nF}$$

where  $F$  is Faraday's constant (96,485 C/mol). The stoichiometric coefficients for copper is  $v_{\text{Cu}} = 1$  for both electrode reactions, and the number of electrons is  $n = 2$ .

The depositing velocity,  $v_{\text{dep}}$ , directed in the normal direction of the electrode into the electrode domain, can be deduced from the molar flux, the density and the molar mass of copper

$$v_{\text{dep}} = \frac{M_{\text{Cu}} N_{\text{Cu}}}{\rho_{\text{Cu}}}$$

## Results and Discussion

Figure 2 shows a surface plot of the electrolyte potential, and a streamline plot of the electrolyte current density, at 96 h, for the deformed geometry.

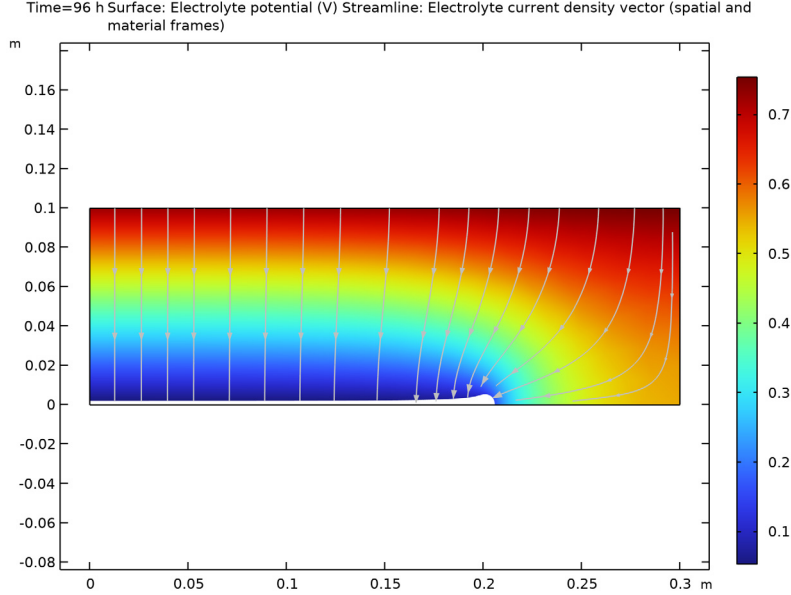


Figure 2: Electrolyte potential (surface) and electrolyte current direction (streamlines) at  $t=96$  h.

The electrode growth reaches its maximum close to the insulator-electrode edge, due to the higher electrode currents in this area. Figure 3 shows the profile change of the depositing electrode during the simulation.

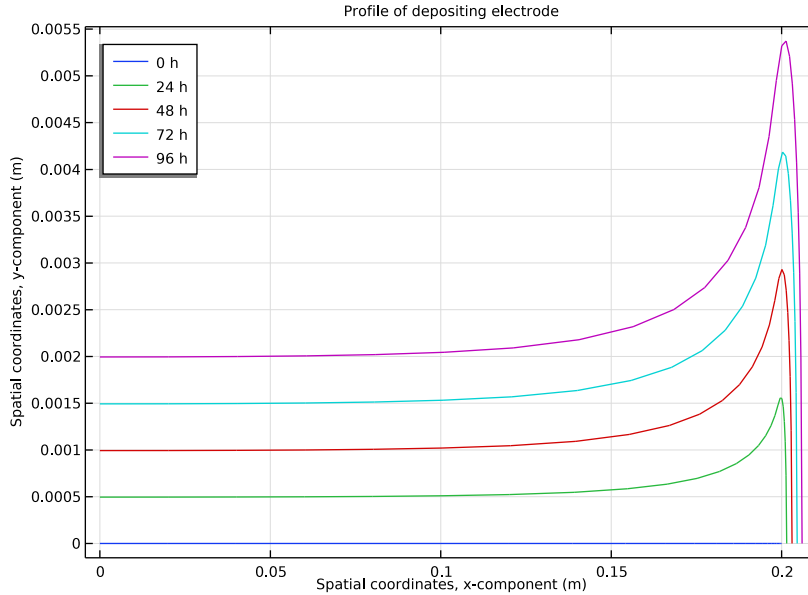


Figure 3: Profile of deposited electrode at various times during the simulation.

### Notes About the COMSOL Implementation

The model is set up using the Electrodeposition, Secondary interface with a single Electrolyte domain. The depositing and dissolving electrodes are modeled with the Electrode Surface boundary nodes.

A time dependent study is used to simulate the electrode growth and dissolution during 96 h.

The default Nondepositing Boundary node is used for the geometry deformation at the insulated boundaries. The boundary condition setting of the feature is changed to Zero Normal Displacement, instead of using the default Zero Normal Velocity. This improves the numerical stability of the geometry deformation on these boundaries.

### Reference

1. J. Deconinck, "Mathematical modelling of electrode growth," *J. Applied Electrochemistry*, vol. 24, pp. 212-218, 1994.

---

**Application Library path:** Electrodeposition\_Module/Verification\_Examples/  
electrode\_insulator\_growth


---

### *Modeling Instruction*




---

From the **File** menu, choose **New**.

#### **NEW**

In the **New** window, click  **Model Wizard**.


#### **MODEL WIZARD**

- 1 In the **Model Wizard** window, click  **2D**.
- 2 In the **Select Physics** tree, select **Electrochemistry>Electrodeposition, Deformed Geometry>Electrodeposition, Secondary**.
- 3 Click **Add**.
- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **Preset Studies for Selected Physics Interfaces>Time Dependent with Initialization**.
- 6 Click  **Done**.



#### **GEOMETRY I**

Draw the geometry using a rectangle and a point.

##### *Rectangle 1 (r1)*

- 1 In the **Geometry** toolbar, click  **Rectangle**.
- 2 In the **Settings** window for **Rectangle**, locate the **Size and Shape** section.
- 3 In the **Width** text field, type 30[cm].
- 4 In the **Height** text field, type 10[cm].

##### *Point 1 (pt1)*

- 1 In the **Geometry** toolbar, click  **Point**.
- 2 In the **Settings** window for **Point**, locate the **Point** section.
- 3 In the **x** text field, type 20[cm].
- 4 In the **Geometry** toolbar, click  **Build All**.



**SECONDARY CURRENT DISTRIBUTION (CD)**

*Electrolyte 1*

Now set up the electrochemical model. Start with the domain settings for the electrolyte.

- 1 In the **Model Builder** window, under **Component 1 (comp1)>**  
**Secondary Current Distribution (cd)** click **Electrolyte 1**.
- 2 In the **Settings** window for **Electrolyte**, locate the **Electrolyte** section.
- 3 From the  $\sigma_1$  list, choose **User defined**. In the associated text field, type  $0.23[\text{S/cm}]$ .

*Electrode Surface 1*

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Electrode Surface**.
- 2 Select Boundary 2 only.
- 3 In the **Settings** window for **Electrode Surface**, click to expand the **Dissolving-Depositing Species** section.
- 4 Click  **Add**.

*Electrode Reaction 1*

- 1 In the **Model Builder** window, click **Electrode Reaction 1**.
- 2 In the **Settings** window for **Electrode Reaction**, locate the **Stoichiometric Coefficients** section.
- 3 In the  $n$  text field, type 2.
- 4 In the **Stoichiometric coefficients for dissolving-depositing species:** table, enter the following settings:

Species	Stoichiometric coefficient (l)
sl	1

- 5 Locate the **Electrode Kinetics** section. From the  $i_{loc,expr}$  list, choose **User defined**. In the associated text field, type  $cd.eta_{er1}*300[\text{mA/cm}^2/\text{V}]$ .

*Electrode Surface 1*

In the **Model Builder** window, right-click **Electrode Surface 1** and choose **Duplicate**.

*Electrode Surface 2*

- 1 In the **Model Builder** window, click **Electrode Surface 2**.
- 2 Select Boundary 3 only.
- 3 In the **Settings** window for **Electrode Surface**, locate the **Electrode Phase Potential Condition** section.

- 4 In the  $\phi_{s,ext}$  text field, type 0.778.

## MULTIPHYSICS

### *Nondeforming Boundary 1 (ndbdg1)*


The following applies a stronger constraint (than the default condition) for the planar nondepositing walls, in order to enforce a zero boundary movement in the normal direction.

- 1 In the **Model Builder** window, under **Component 1 (comp1)**>**Multiphysics** click **Nondeforming Boundary 1 (ndbdg1)**.
- 2 In the **Settings** window for **Nondeforming Boundary**, locate the **Nondeforming Boundary** section.
- 3 From the **Boundary condition** list, choose **Zero normal displacement**.

## MESH 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)** click **Mesh 1**.
- 2 In the **Settings** window for **Mesh**, locate the **Sequence Type** section.
- 3 From the list, choose **User-controlled mesh**.

### *Size 1*

- 1 In the **Model Builder** window, right-click **Free Triangular 1** and choose **Size**.
- 2 In the **Settings** window for **Size**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Point**.
- 4 Select Point 3 only.
- 5 Locate the **Element Size** section. Click the **Custom** button.
- 6 Locate the **Element Size Parameters** section.
- 7 Select the **Maximum element size** check box. In the associated text field, type 0.1 [mm].
- 8 Click  **Build All**.


## STUDY 1

Set the solver to simulate 96 hours of deposition, storing the solution every 3 hours.

### *Step 2: Time Dependent*

- 1 In the **Model Builder** window, under **Study 1** click **Step 2: Time Dependent**.
- 2 In the **Settings** window for **Time Dependent**, locate the **Study Settings** section.
- 3 From the **Time unit** list, choose **h**.





- 4 In the **Output times** text field, type `range(0,3,96)`.
- 5 In the **Home** toolbar, click  **Compute**.


## RESULTS

### *Electrolyte Potential (cd)*

A 2D plot of the electrolyte potential and the deformation is created by default. Change the frame of the dataset edges to Geometry in order to show the outline of the original (undeformed) geometry in the figure.

- 1 In the **Settings** window for **2D Plot Group**, locate the **Plot Settings** section.
- 2 From the **Frame** list, choose **Geometry (Xg, Yg, Zg)**.
- 3 In the **Electrolyte Potential (cd)** toolbar, click  **Plot**.
- 4 Click the  **Zoom Extents** button in the **Graphics** toolbar.

### *Profile of Depositing Electrode*

- 1 In the **Home** toolbar, click  **Add Plot Group** and choose **1D Plot Group**.  
Use the following steps to create Figure 3.
- 2 In the **Settings** window for **1D Plot Group**, type **Profile of Depositing Electrode** in the **Label** text field.
- 3 Locate the **Data** section. From the **Time selection** list, choose **From list**.
- 4 In the **Times (h)** list, choose **0, 24, 48, 72, and 96**.
- 5 Click to expand the **Title** section. From the **Title type** list, choose **Manual**.
- 6 In the **Title** text area, type **Profile of depositing electrode**.
- 7 Locate the **Legend** section. From the **Position** list, choose **Upper left**.

### *Line Graph 1*

- 1 Right-click **Profile of Depositing Electrode** and choose **Line Graph**.
- 2 Select **Boundary 2** only.
- 3 In the **Settings** window for **Line Graph**, locate the **y-Axis Data** section.
- 4 In the **Expression** text field, type `y`.
- 5 Locate the **x-Axis Data** section. From the **Parameter** list, choose **Expression**.
- 6 In the **Expression** text field, type `x`.
- 7 Click to expand the **Legends** section. Select the **Show legends** check box.
- 8 From the **Legends** list, choose **Evaluated**.
- 9 In the **Legend** text field, type `eval(t,h) h`.

**10** In the **Profile of Depositing Electrode** toolbar, click  **Plot**.